

## TROLLEY WITH TRACTION



Manual trolley with **CHEMITOOL** traction, safe for work and convenient for maintenance.

The structure is compact and the mounting size is small. It's easy to adjust the spacing of the idler wheel flange according to the width of the orbit.

The axles of the intermediate wheel include bearings, which allows for efficient operation as they only require a very small thrust and pull force.

The intermediate wheel adopts a special tread, which means it can run along the beam with a pitch above 1:6 or below 1:6 for the flat.


The wheel has a rim, so it can run on a smaller radius of curvature.



## APPLICATION FIELDS

- ✓ Industry and Construction

## TECHNICAL SPECIFICATIONS

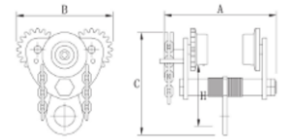

SAP	CHT401030500000	CHT401031000000	CHT401032000000	CHT401033000000	CHT401035000000	CHT40103100000000	
Capacity (T)	0,5	1	2	3	5	10	
Beam width (mm)	68-126	80-146	80-168	88-168	100-170	122-2023	
Dimensions	A	208	242	318	340	365	410
	B	196	236	273	320	366	389
	C	190	211	236	295	334	460
	H	108	115	130	164	177	237
	F	3	3	3	3	3	3

## REFERENCES

SAP	Description	EAN
CHT401030500000	MANUAL GEAR TROLLEY WITH TRACTION 0,5T	5604630152884
CHT401031000000	MANUAL GEAR TROLLEY WITH TRACTION 1T	5604630152891
CHT401032000000	MANUAL GEAR TROLLEY WITH TRACTION 2T	5604630152907
CHT401033000000	MANUAL GEAR TROLLEY WITH TRACTION 3T	5604630152914
CHT401035000000	MANUAL GEAR TROLLEY WITH TRACTION 5T	5604630152921
CHT4010310000000	MANUAL GEAR TROLLEY WITH TRACTION 10T	5604630152938

**Note:** The technical information provided, verbally or in writing, is based on our current knowledge and should be regarded as non-binding collaboration. The use of the product is beyond our control, therefore we disclaim all liability for improper use of the product. The customer is responsible for confirming and evaluating (through testing) whether the product is suitable for the process and type of use in question. Our purpose is exclusively to guarantee the quality of the products in accordance with our standards.